

Operation:

1. Assemble handles and wheels as shown in Figure A.
2. Insert a set of handles in the back of the compressor, and secure with pins.
3. Tip the front of the compressor up by having a person push down on the back handles. Insert the Air Roller assembly and secure the pins. See (Figure B). Once secured, gently set compressor back down.
4. To remove assembly, simply tip as before, remove pins, and slide assembly out.

When properly assembled, Air Roller Compressor Assembly should resemble Figure C.

5. To roll, simply lift from back side handles and push forward.

Please remember to use proper lifting techniques.

WARNING! Compressors should be rolled on level surfaces only. Do not roll down stairs or over curbs. To maneuver over obstacles such as curbs, lift compressor.

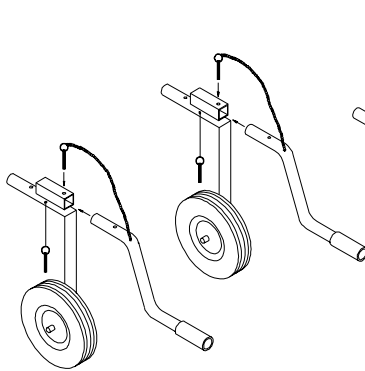


Figure A

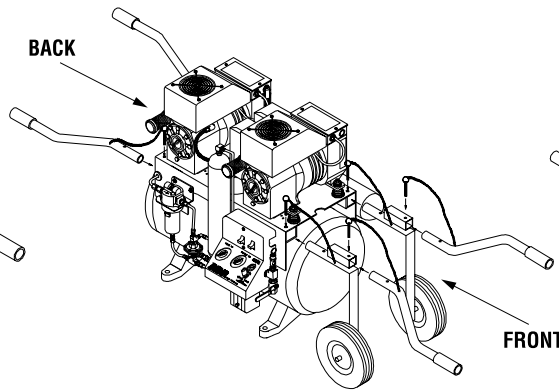


Figure B

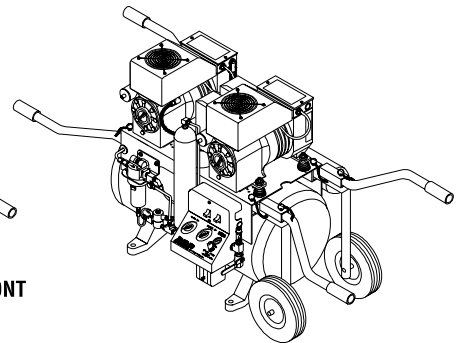


Figure C

Warranty Information: • 90 Days

All ADP accessories are thoroughly inspected and tested in accordance with rigid specifications and standards. Our accessories are guaranteed against any defective material and workmanship from the date of shipment; provided that the installation, operation, and maintenance is done in accordance with ADP procedures as outlined in our Installation and Maintenance Guides. Warranty cards must be returned to ADP within ten days of installation to effect warranty. No other warranties or guarantees, expressed or implied are made.

ADP's obligation under the warranty is to provide parts for the repair or, at its option, to provide the replacement product (excluding labor). All special, incidental and/or consequential damages are excluded. We will not issue credit for accessories without first attempting to correct the problem in the field. Written notice of breach of warranty must be given to ADP within the warranty period. The warranty does not cover damage resulting from improper installation or maintenance, accident or misuse. The warranty does not cover damage resulting from the use of cleaning, disinfecting or sterilizing chemicals and processes. The warranty does not cover vacuum failures due to hard water deposits. Failure to follow instructions provided in ADP's Installation and Maintenance Guides may void the warranty.